



Puertas & Portones Automáticos, S.A. de C.V.

¡Nuestra pasión es la Solución!....

»CERRADURA EXTERIOR PARA BARRA DE PANICO (TRIM) TIPO PLACA
GRANDE MANIJA CON LLAVE MARCA ADS MOD.TM009S.



TRIM



MANUAL DE INSTALACION



Versión Digital.

(229) 461-7028



portonesautomaticos@adsver.com.mx
portonesautomaticos@prodigy.net.mx



RESIDENCIAL



COMERCIAL



INDUSTRIAL



MEMBER
IDA
International Door Association



V08.21



(229) 927-5107, 167-8080, 167-8007, 151-7529.

www.adsver.com.mx

MANUAL DE INSTALACION

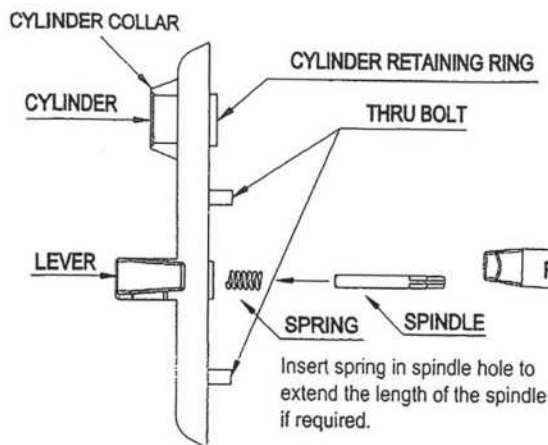


Fig1

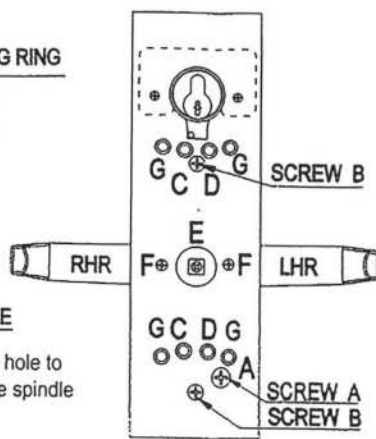


Fig2

SERIES SHOWN

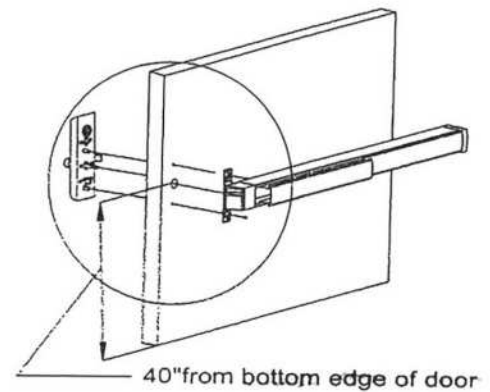


Fig3

Door Handing

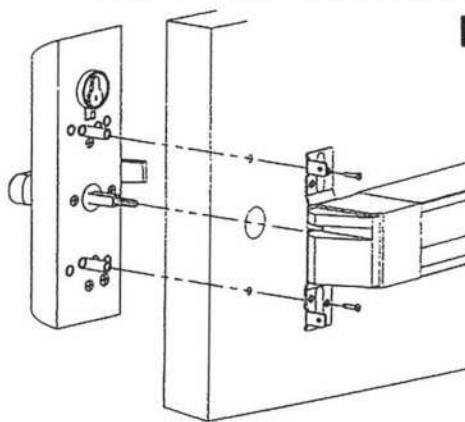


Fig4

Left Hand-Reverse
Orientation

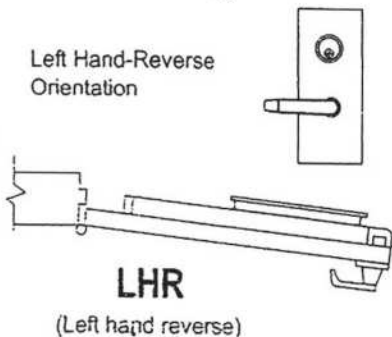


Fig5

Right Hand-Reverse
Orientation


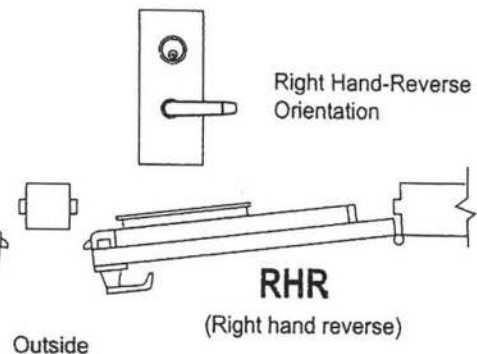



Fig6

Instructions for converting Entry to Night latch function .


Entry function can be converted to Night latch function by inverting the cam on the mortise cylinder. The steps below show how to invert the cam:

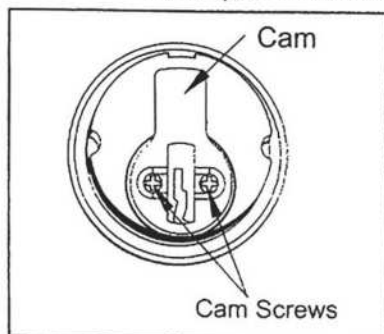

Step # 1:
Locate cam and cam screws on the back of the mortise cylinder.

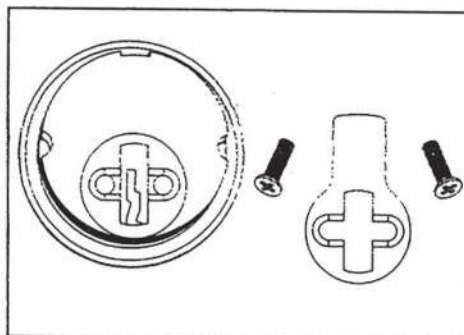

Step # 2:
Remove the two cam screws and the cam.

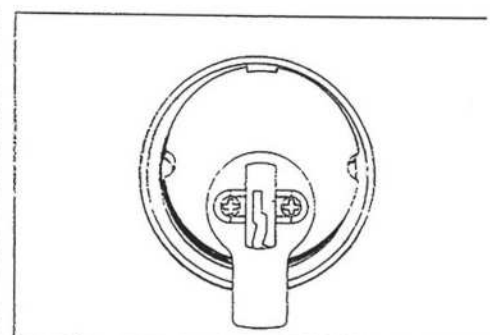




Step # 3:
Rotate cam 180 degrees and re-install in the down position.
Re-install and tighten the cam screws being careful not to over tighten them as overtightened screws will make mortise cylinder difficult to operate.

Step # 4:
Follow directions for installing cylinder into trim.

Do not insert the key while converting function.

For HEAVY DUTY Series-LHR or RHR, drill (4) G holes.
For STANDARD Series,
If LHR, drill hole C&C.
If RHR, drill hole D&D.

INTERIOR SIDE OF DOOR

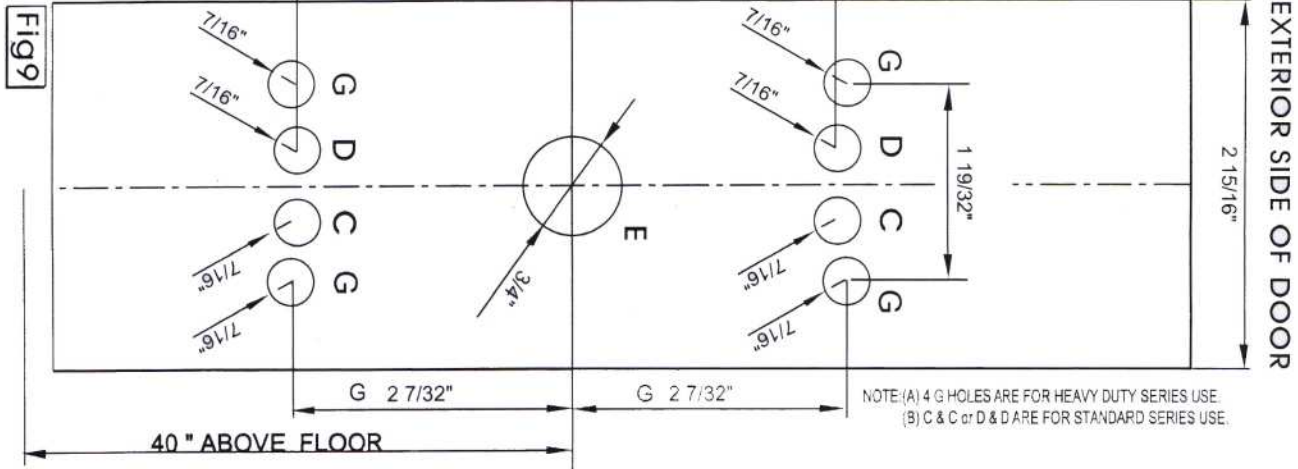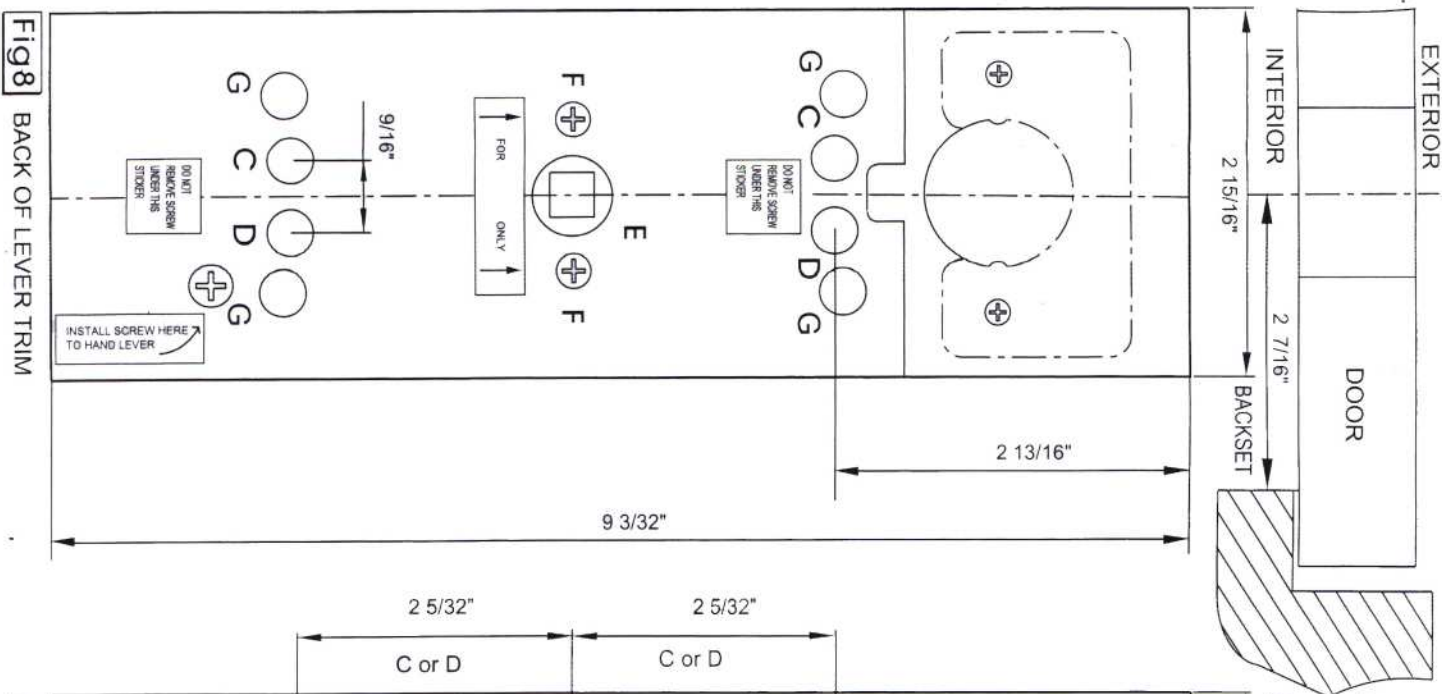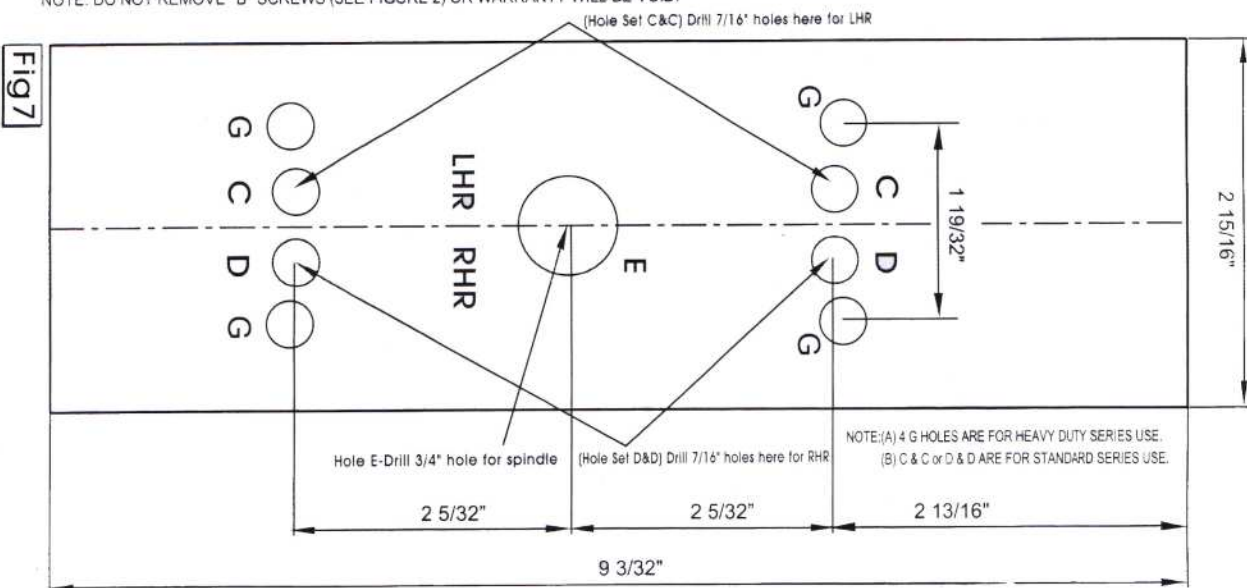


INSTALLATION INSTRUCTIONS


1. DETERMINE HANDING OF DOOR AS LHR OR RHR AND ROTATE LEVER TO CORRESPONDING POSITION. (SEE FIGURE 5 AND 6).
2. INSERT SCREW A INTO HOLE "A" (SEE FIGURE 2) AND TIGHTEN TO SECURE LEVER POSITION.
3. INSERT SPINDLE INTO BACK OF LEVER IN HOLE "E". (SEE FIGURE 2).
4. FOR HEAVY DUTY SERIES SCREWTHRU BOLTS INTO (4) G HOLES & FOR STANDARD SERIES SCREW THRU BOLTS INTO EITHER C&C FOR LHR OR D&D FOR RHR AND TIGHTEN.
5. IF CYLINDER IS REQUIRED, INSTALL CYLINDER INTO CYLINDER HOLE WITH CYLINDER COLLAR AND SECURE WITH CYLINDER RETAINING RING.
6. IF DUMMY TRIM IS BEING USED, PUT THE LEVER AT THE REQUIRED LHR OR RHR POSITION, INSERT SCREWS INTO HOLES F&F AND TIGHTEN TO MAKE LEVER RIGID.
7. PROCEED WITH TEMPLATING DOOR AS SHOWN IN FIG 7 AND FIG 9 FOR EITHER HEAVY DUTY OR STANDARD SERIES.
8. INSERT LEVER ESCUTCHEON TRIM INTO DOOR PREP. (SEE FIGURE 3) AND SECURE TO EXIT DEVICE USING MOUNTING SCREWS (SEE FIGURE 4).

NOTE: DO NOT REMOVE "B" SCREWS (SEE FIGURE 2) OR WARRANTY WILL BE VOID.



Puertas & Portones Automáticos, S.A. de C.V.
¡Nuestra pasión es la Solución!....

 (229) 461-7028

 portonesautomaticos@adsver.com.mx
portonesautomaticos@prodigy.net.mx



RESIDENCIAL



COMERCIAL



INDUSTRIAL



International Door Association



V08.21

(229) 927-5107, 167-8080, 167-8007, 151-7529.



www.adsver.com.mx